


Modell Vario SV



Leucht- und Montagetische
Höhenverstellung und Schrägverstellung

Light and assembly tables
hight and angle adjustable

Tables lumineuses
Régables en hauteur et inclinables

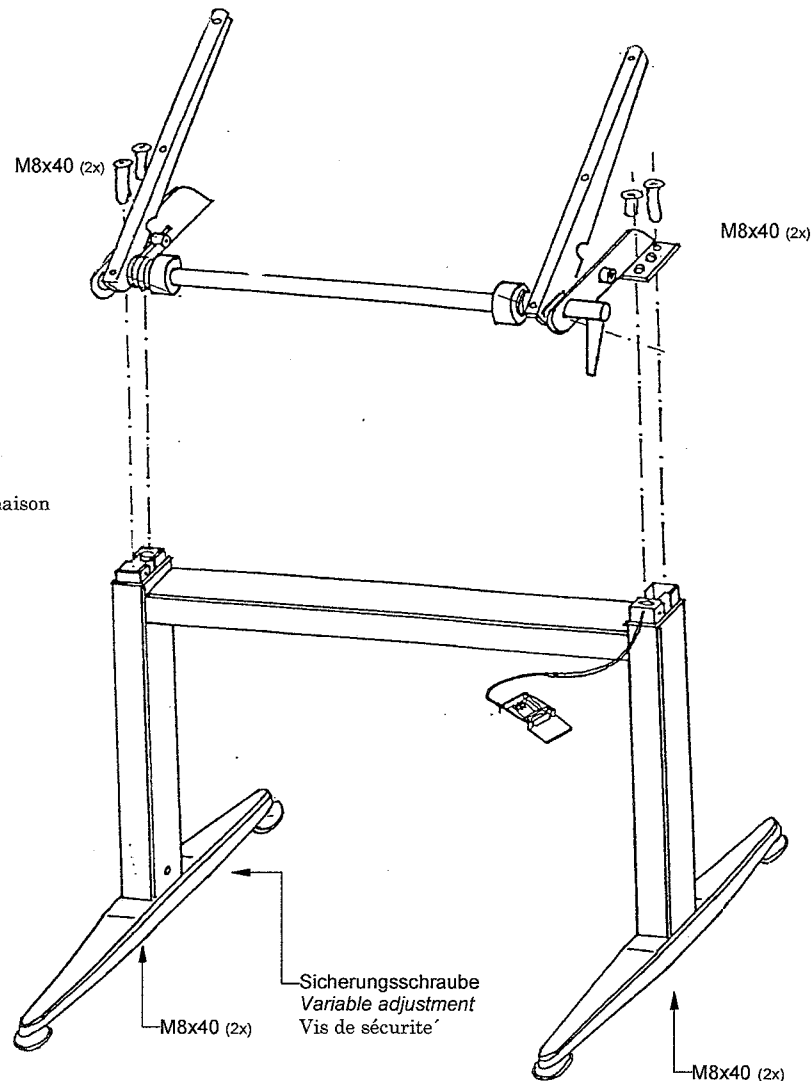

Die Schrägverstellung wird
ohne Auflageschienen
montiert

*The tilt is installed
without support rails*

*Le dispositif de réglage en inclinaison
est monté sans rail support*

Sicherungsschraube erst
nach kompletter Montage lösen.

*Variable adjustment only
after complete assembly.*

*Retirer la vis de sécurité
uniquement après avoir
monter l'ensemble.*

Sicherungsschraube
Variable adjustment
Vis de sécurité

Operating instruction of angle adjustment

Adjusting the counter balance

- First unlock brake handle. Put drawing board to an angle of approx. 75° and lock brake system again.
- Now tighten locking screw on set collar. If it is in the way, you can change position of brake handle by pulling it out.
- In order to check that the adjustment is correct, angle the lighttable, so that it is vertical and unlock the brake.
- When the adjustment is correct, the board must stop before it has reached the horizontal position.
- For more weight the angle must be higher ($+75^\circ$). An angle of less than 75° must be used for lower weights.

