


GARMENT VIEWING BOOTH

Assembly and Operating Instructions

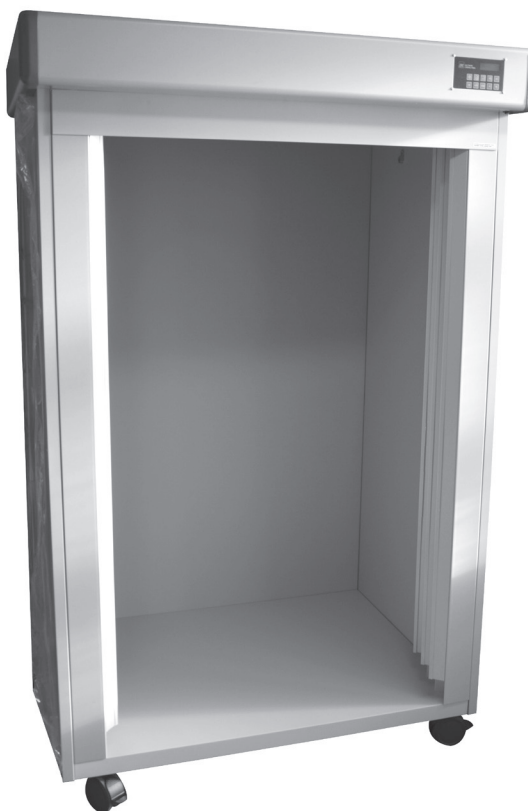

Item No. 27706 | 200737





GER | JUST Normlicht GmbH | Vertrieb + Produktion | Tobelwasenweg 24 | 73235 Weilheim / Teck | Tel.: 07023 9504-0 | Fax: 07023 9504-52
US | JUST Normlicht Inc. | 2000 Cabot Blvd. West, Suite 120 | Langhorne, PA 19047-2408 | Phone: +1 267 852 2200 | Fax: +1 267 852 2207
FR | JUST Normlicht France SARL | 3 Rue Louis Pasteur | 67240 Bischwiller | Tel.: +33 (0)3880628-22 | Fax: +33 (0)3880628-23



Support:

Stefan Blum
Technical Director
Phone: +49 (0)7023 9504-43
E-Mail: stefan.blum@just.de



JUST Normlicht GmbH
Vertrieb + Produktion
Tobelwasenweg 24
73235 Weilheim / Teck


Phone: 07023 9504-0
Fax: 07023 9504-52

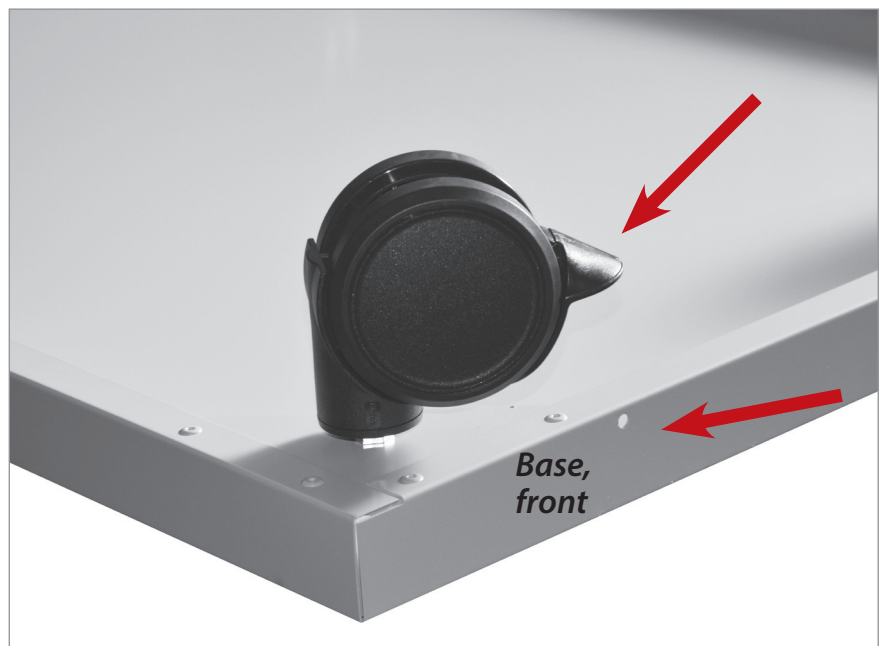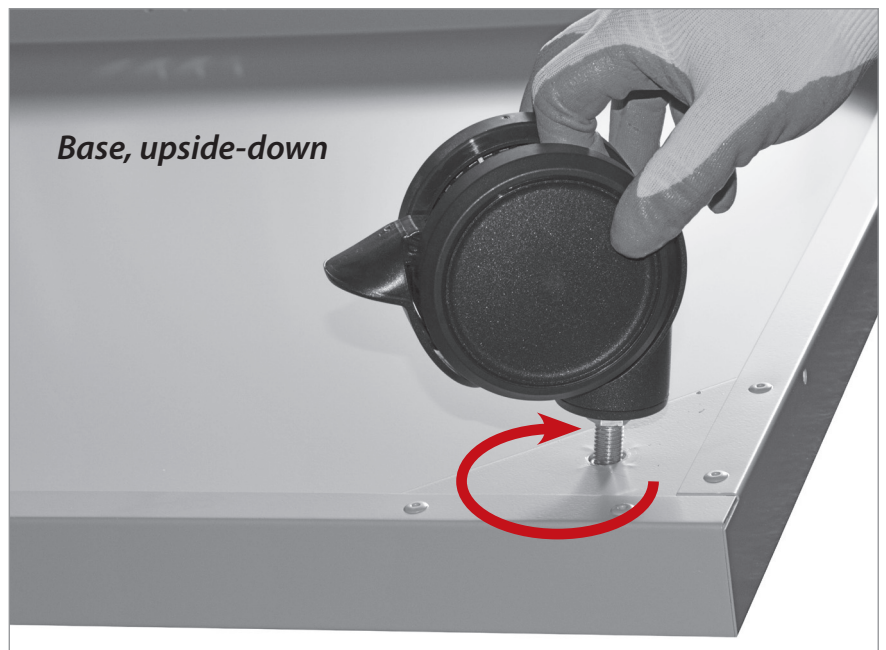


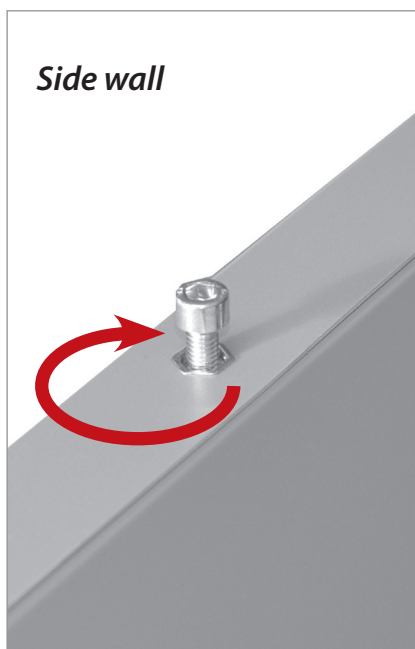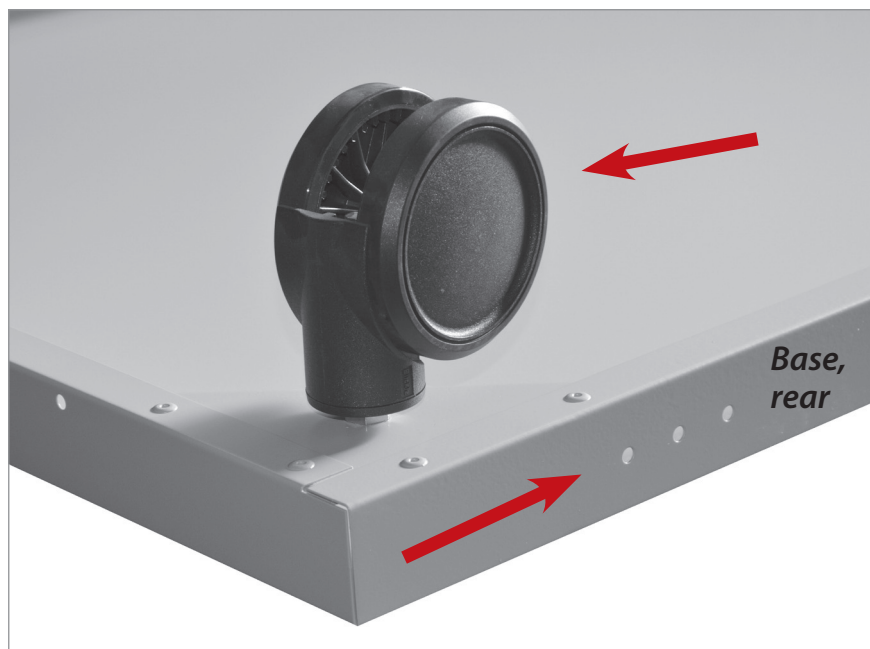


(2x) 5 x Screw, M6x16

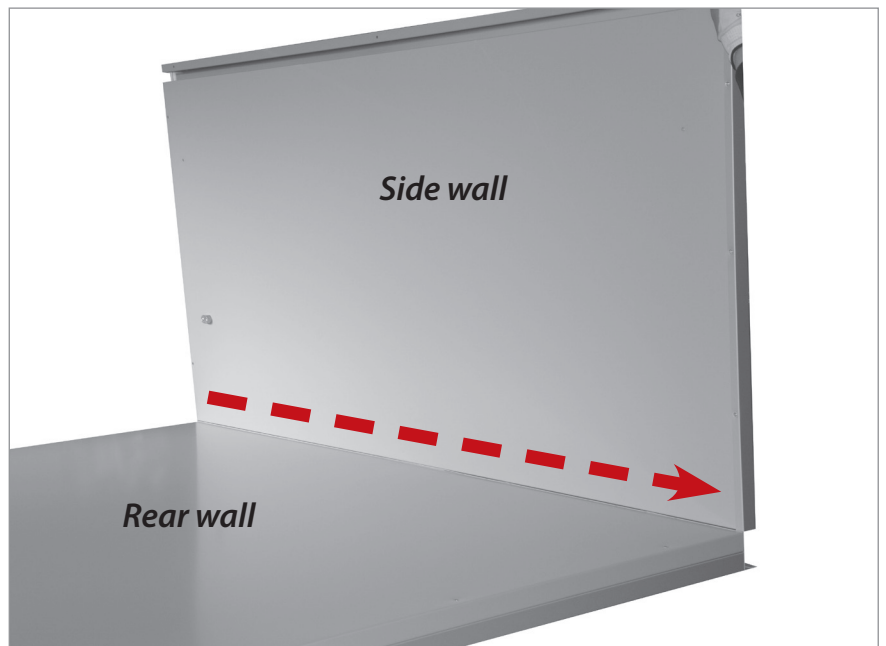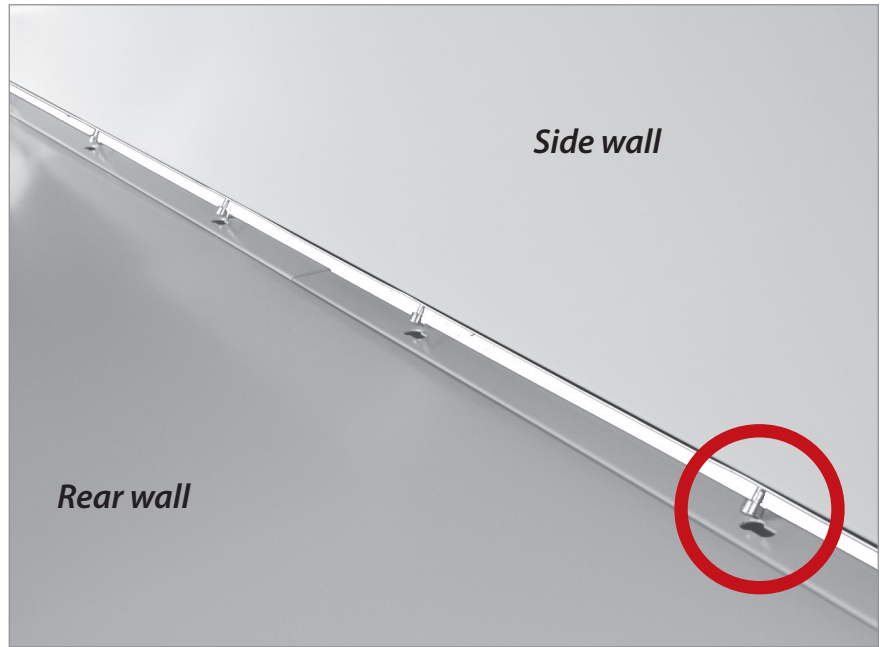

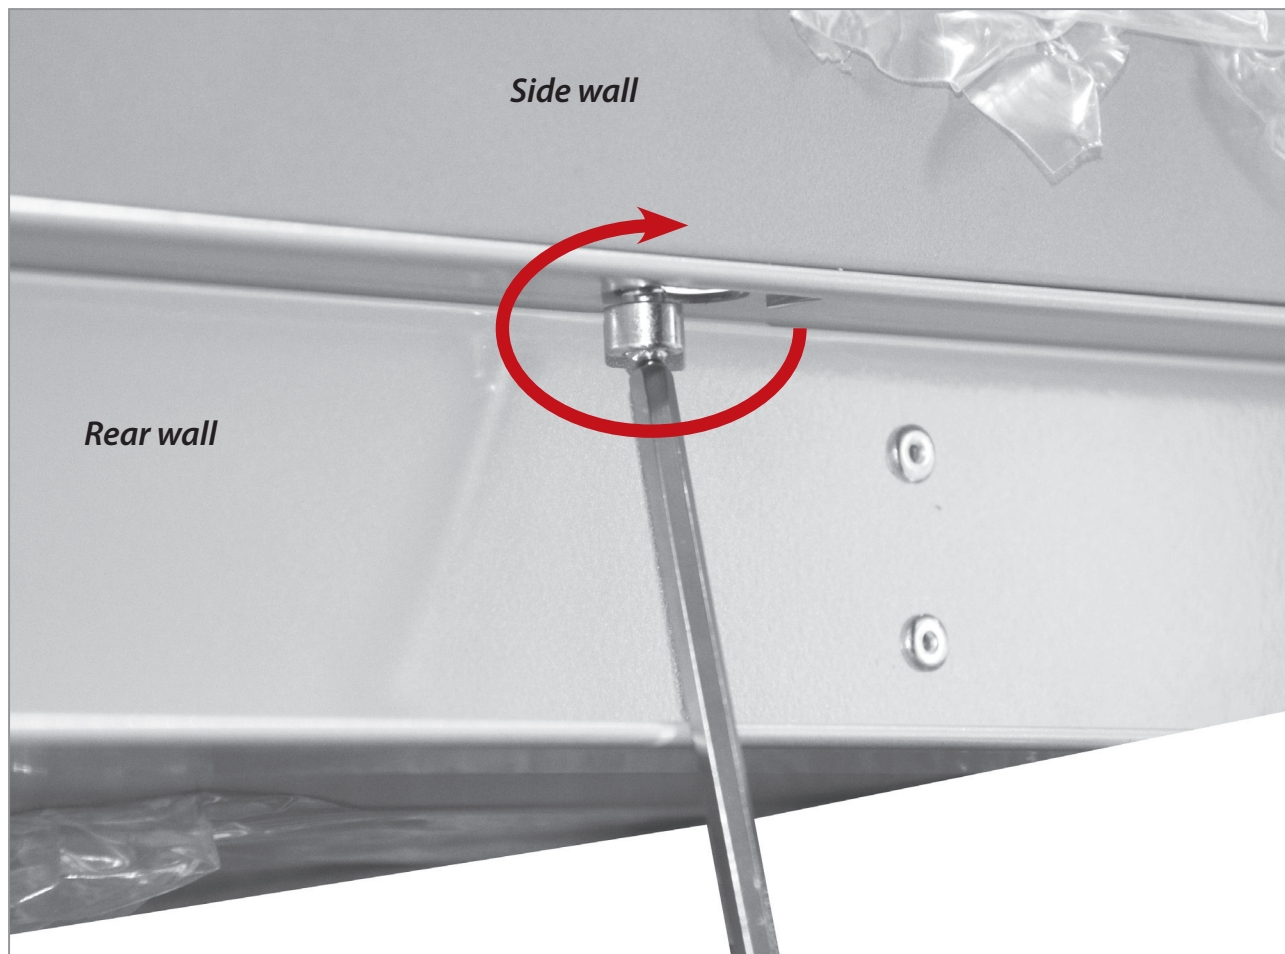


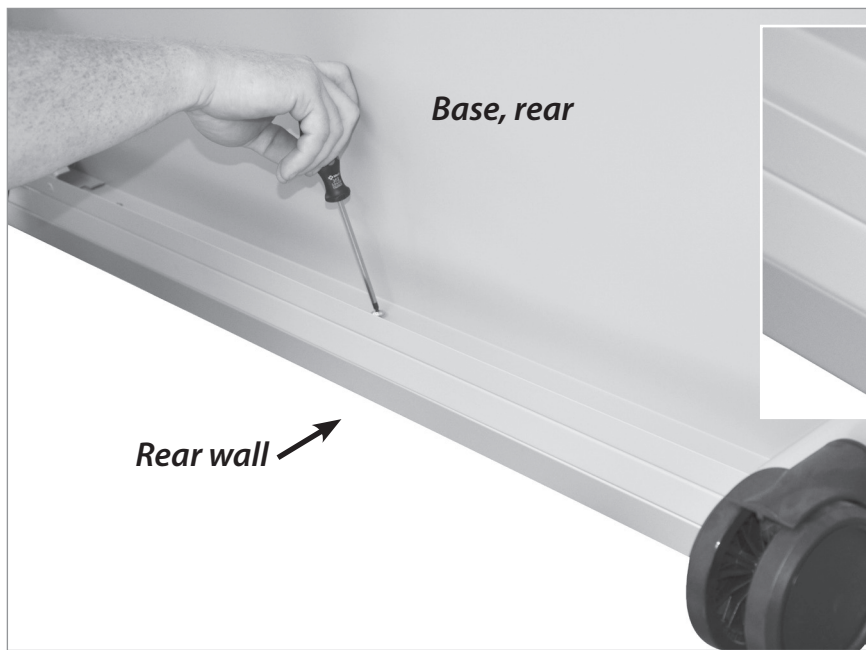

3 x Screw, M5x12

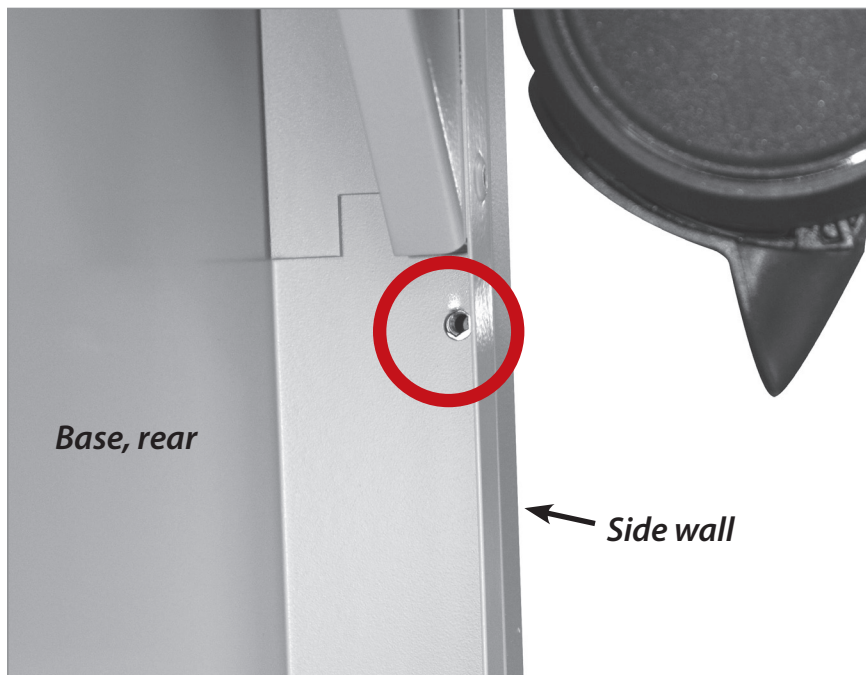




(2x) 3 x Screw, M5x12

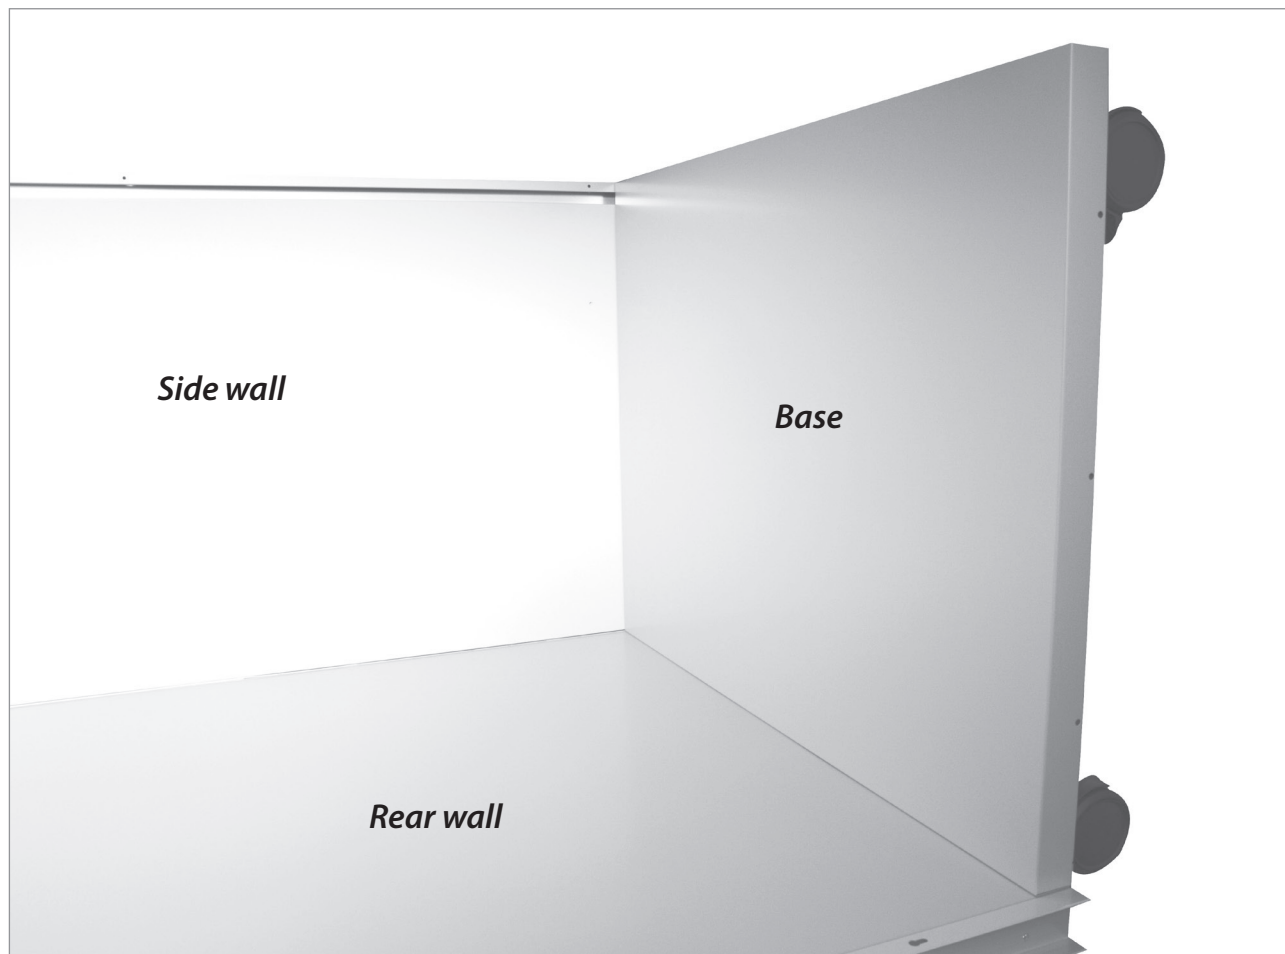





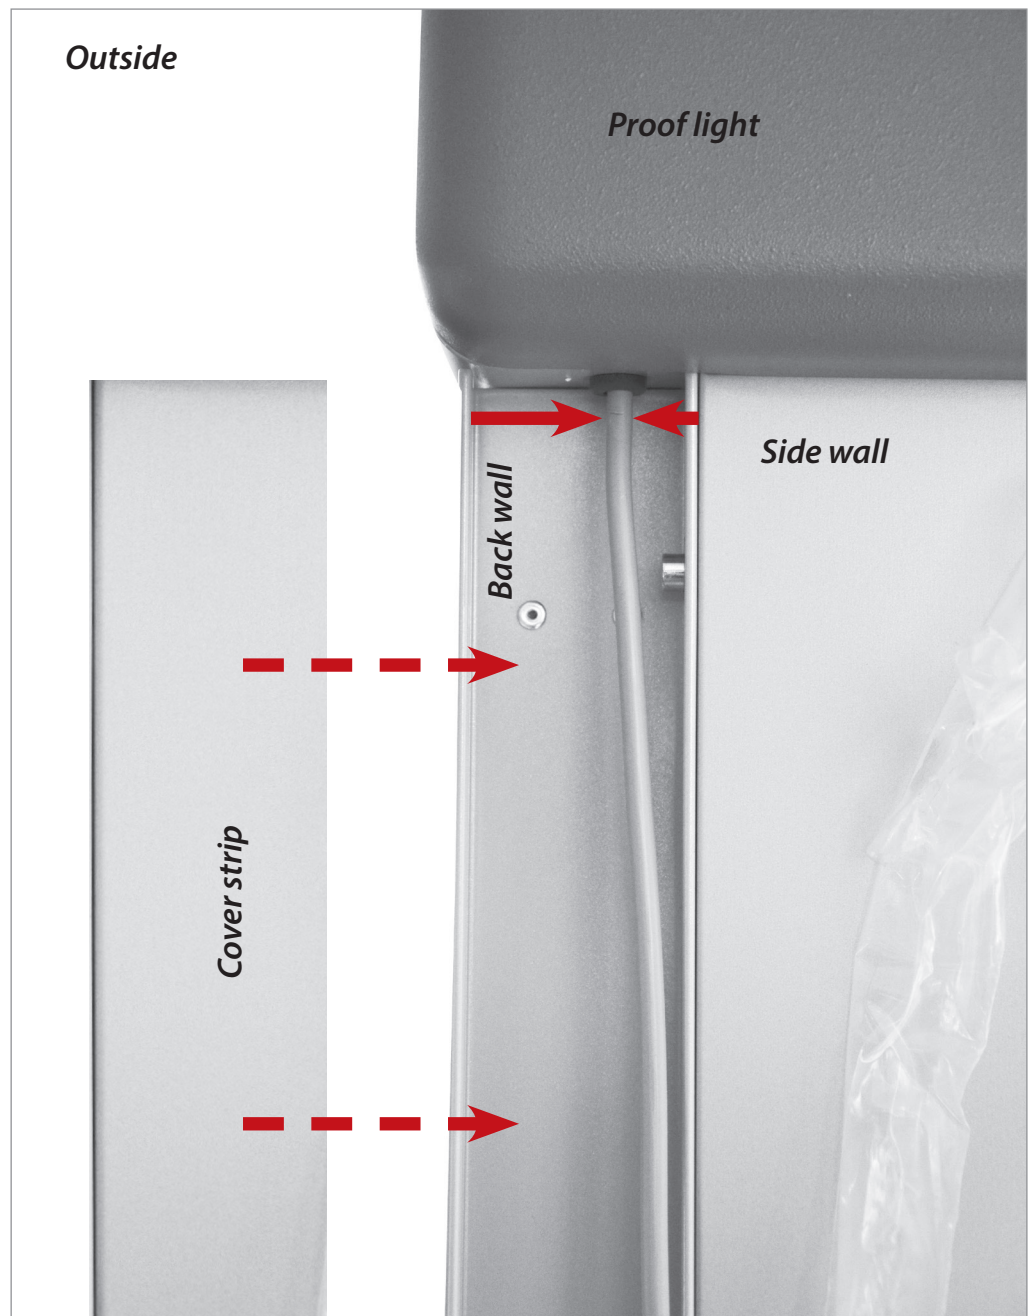

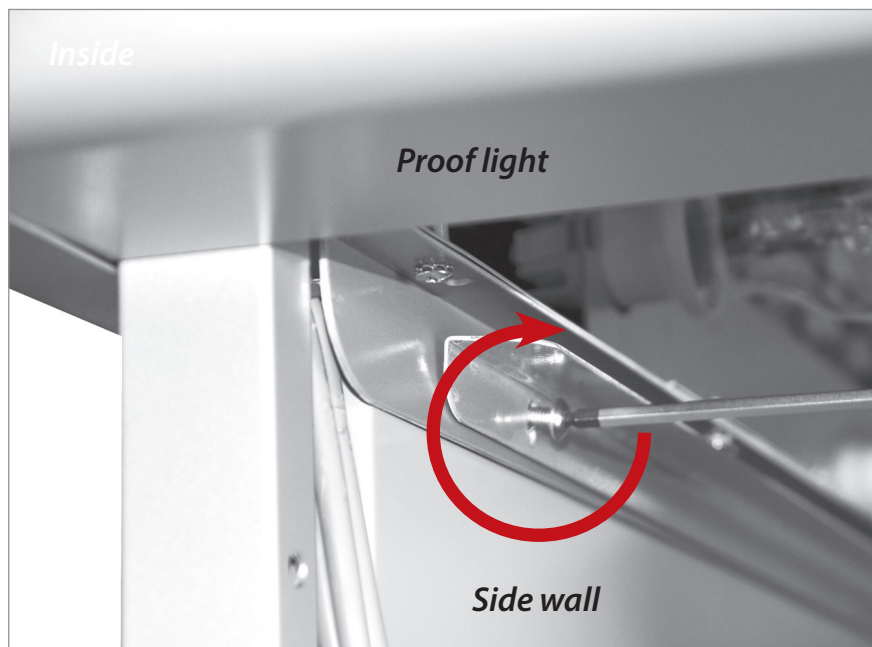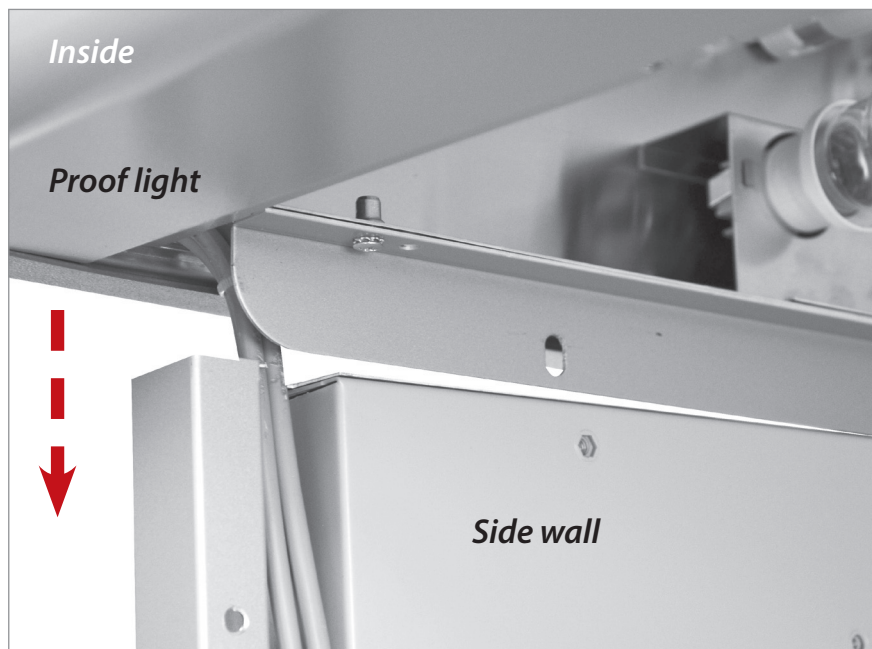



(2x) 2 x Screw, M5x12



First, connect cables!

(2x) 5 x Screw, M4x12

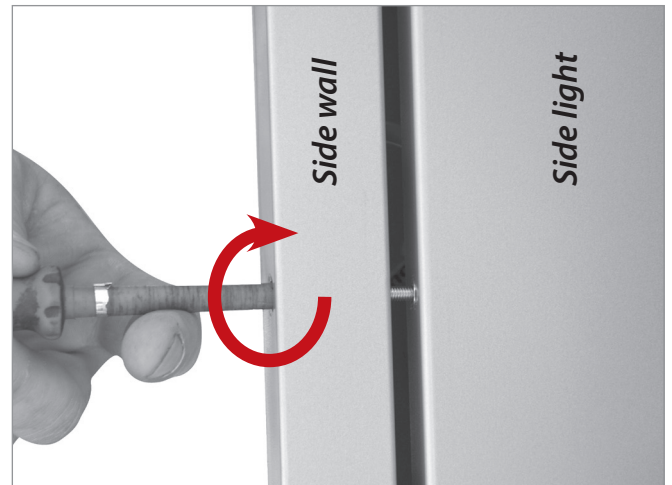

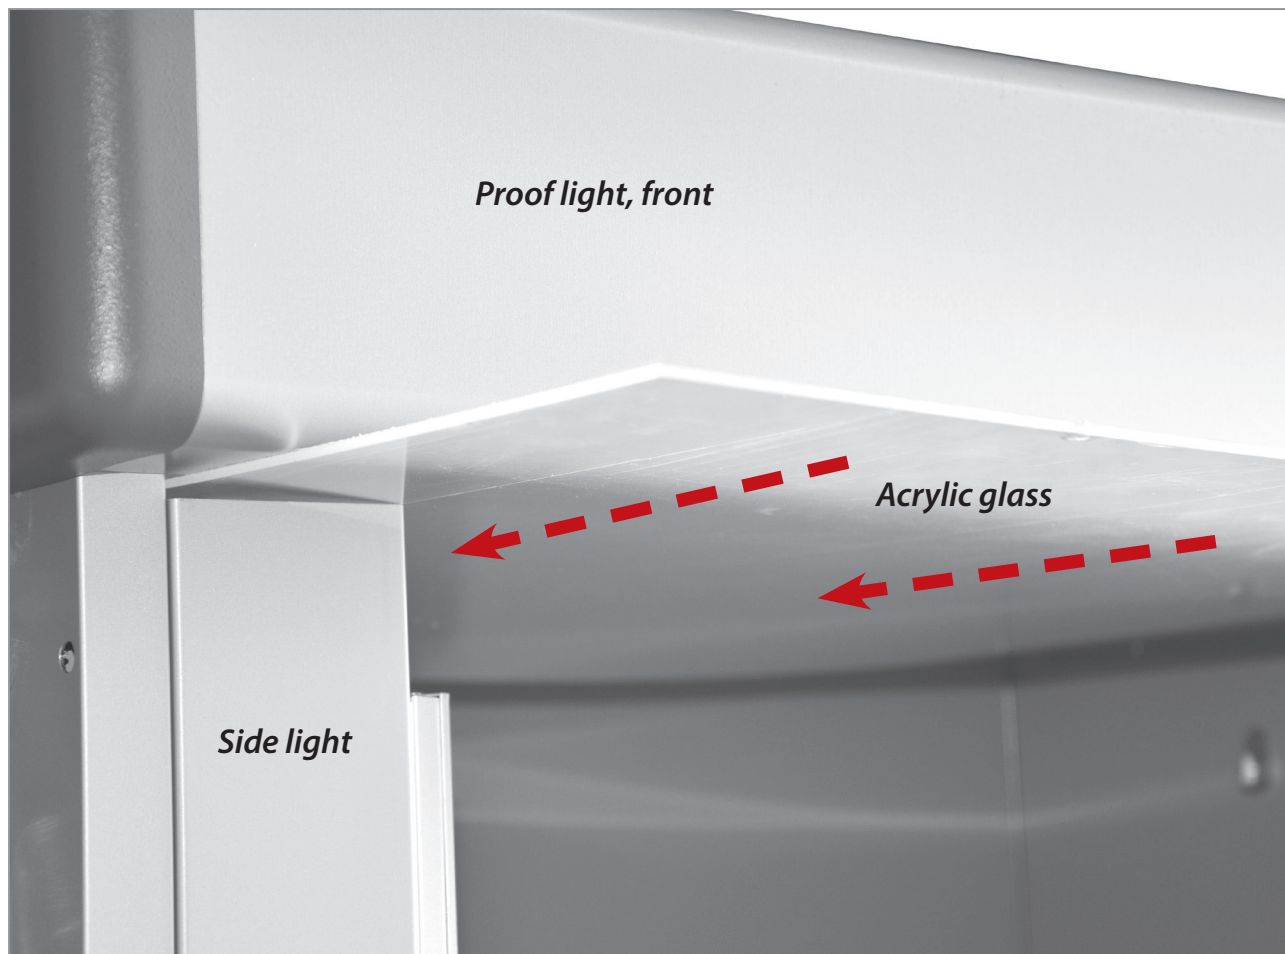




2x Screw, M5x20



IMPORTANT:
The booth
is not accessible!

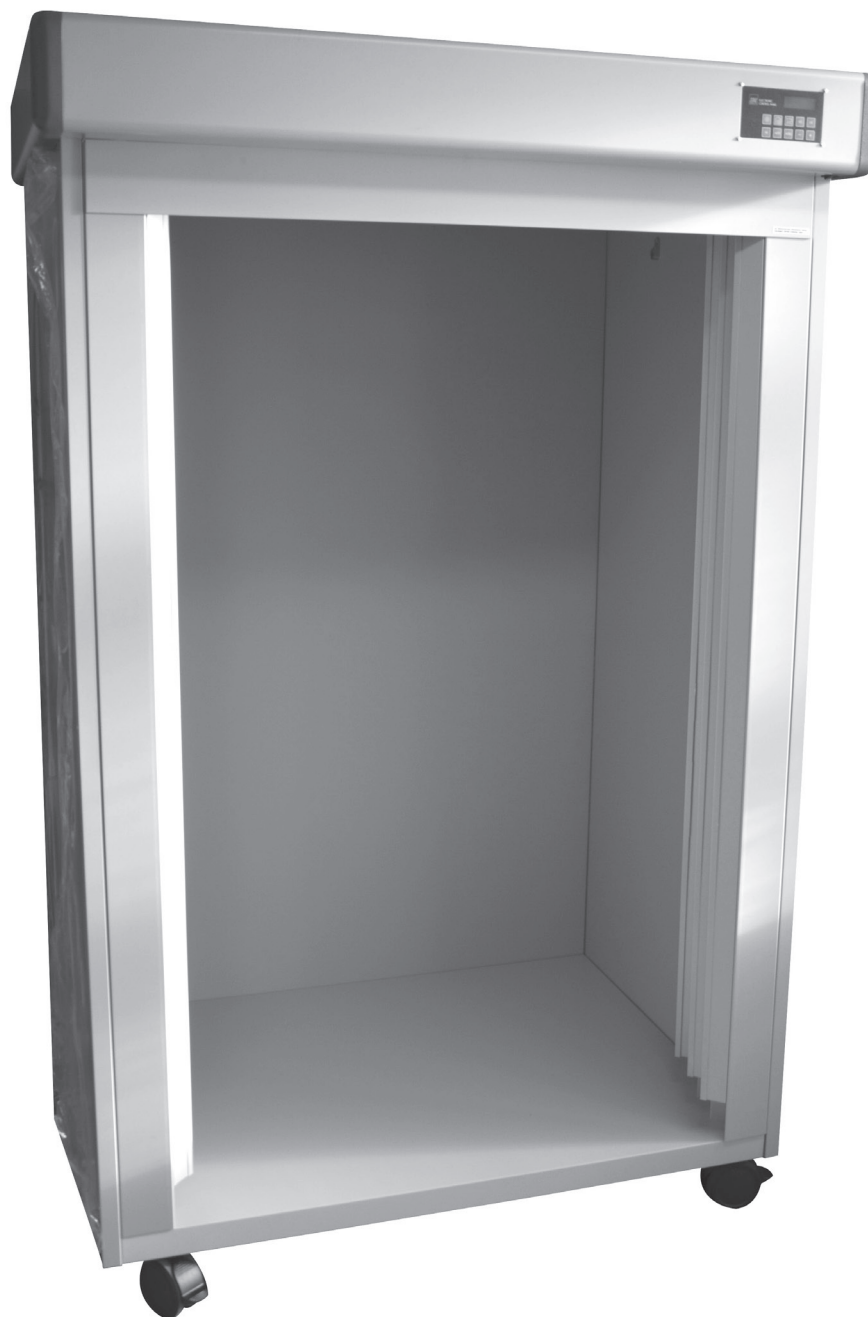

Electronic Control Panel

LAN CONNECTION

Connect the Garment Viewing Booth to the in-house network by means of the LAN connection:

1. IP address:
appears during the warm-up phase in the display
2. Alternatively: press the MENU key
3. Use the +/- keys to select 4. *Network Settings*, confirm with OK
The display reads:
DHCP: _____
IP: _____
SUBNET: _____
GATEW: _____
4. Start the browser and enter the IP address (without leading zeros!):
http://192.168.____.____

BROWSER-BASED REMOTE APP

The assignment of an IP address permits wireless use with smartphones or laptops. To do so, the IP address output must be entered in the browser. The following settings can be made via the remote control application:

Light sources

- Switching illuminants ON/OFF
 - Dimming of illuminants
1. Switch illuminant on/off, confirm with OK
 2. Define required dimming (%), confirm with OK

Programs

Program Number	Program Name	Program Steps	Actions
1	Programm 1	4	Start program Stop program Generate report
2	Programm 2	5	Start program Stop program Generate report
3	Programm 3	5	Start program Stop program Generate report
4	Programm 4	5	Start program Stop program Generate report
5	Programm 5	5	Start program Stop program Generate report
6	Programm 6	5	Start program Stop program Generate report
7	Programm 7	5	Start program Stop program Generate report
8	Programm 8	5	Start program Stop program Generate report
9	Programm 9	5	Start program Stop program Generate report
10	Programm 10	5	Start program Stop program Generate report

Setup

Customer

Parameter	Saved Value	Input
Company		<input type="text"/>
Address 1		<input type="text"/>
Address 2		<input type="text"/>
ZIP / City		<input type="text"/>
<input type="button" value="Save"/>		

Contractor

Parameter	Saved Value	Input
Company		<input type="text"/>
Address 1		<input type="text"/>
Address 2		<input type="text"/>
ZIP / City		<input type="text"/>
<input type="button" value="Save"/>		

Test object

Parameter	Saved Value	Input
Title		<input type="text"/>
Description		<input type="text"/>
Serial number		<input type="text"/>
Date of test		<input type="text"/>
Tested by		<input type="text"/>
<input type="button" value="Save"/>		

Program / Report

- Starting / stopping programs
 - Generate Report (Reporting)
1. *Start/stop program*
 2. Reporting: enter data regarding the matching process in the white fields
 3. *Save*
 4. Generate report and save as htm file

Note: The Report cannot be stored with the respective programs. A new Report must be completed for each matching process.

Manage Programs

Program Number	Program Name	Program Steps	Actions
1	Programm 1	4	Edit program Favorite 1 Favorite 2 Favorite 3
2	Programm 2	5	Edit program Favorite 1 Favorite 2 Favorite 3
3	Programm 3	5	Edit program Favorite 1 Favorite 2 Favorite 3
4	Programm 4	5	Edit program Favorite 1 Favorite 2 Favorite 3
5	Programm 5	5	Edit program Favorite 1 Favorite 2 Favorite 3
6	Programm 6	5	Edit program Favorite 1 Favorite 2 Favorite 3
7	Programm 7	5	Edit program Favorite 1 Favorite 2 Favorite 3
8	Programm 8	5	Edit program Favorite 1 Favorite 2 Favorite 3
9	Programm 9	5	Edit program Favorite 1 Favorite 2 Favorite 3
10	Programm 10	5	Edit program Favorite 1 Favorite 2 Favorite 3

Favorites

Favorites can directly started on the device itself.

Favorite 1	Programm 1
Favorite 2	Programm 2
Favorite 3	Programm 3

Manage Programs

- Editing of programs
 - Creation of program steps (duration of sequence in sec., dimming of illuminants in %, mixed light)
 - Definition of favorites
1. *Edit program*
 2. Change program name, confirm with *OK*
 3. Up to 10 program steps can be set; to do so, click on *Add step*
 4. Actions: select the step to be edited, and click on *edit*
 5. Assign parameters and *Save*

Manage Programs

Info: You edit program number 1.

Program Step	Duration	Light. D65	Light. A	Light. TL84	Light. D50	Light. UV	Actions
Schritt 1	10 sec.	100%	0%	100%	0%	100%	<i>edit</i>
Schritt 2	10 sec.	0%	0%	0%	100%	0%	<i>edit</i>
Schritt 3	8 sec.	0%	0%	100%	0%	100%	<i>edit</i>
Schritt 4	12 sec.	0%	0%	0%	0%	0%	<i>edit</i>

Add step.

Parameter	Saved Value	Input
Program Name	Programm 1	Programm 1
<input type="button" value="Save"/>		

Manage Programs

Info: You edit program number 1, Step 5.

Step 5

Parameter	Saved Value	Input
Duration (in sec.)	20 s.	<input type="text" value="20"/> s.
Dimming light source D65	0 %	<input type="text" value="0"/> %
Dimming light source A	0 %	<input type="text" value="0"/> %
Dimming light source TL84	0 %	<input type="text" value="0"/> %
Dimming light source D50	0 %	<input type="text" value="0"/> %
Dimming light source UV	100 %	<input type="text" value="100"/> %
<input type="button" value="Save"/>		

Device Settings

- Reading out/resetting the operation hours
 - Activating an Operation Mode (Single Source/Mixed Light)
 - Restoring the factory settings
1. The operation hours meter counts down and draws attention to the next lamp change
 2. The operation hours meter must be reset whenever a lamp is changed
 3. The device can generally be operated with a single light source or mixed light

Network Settings

- Reading out network settings
 - Changing the Host name
1. An individual Host name can be assigned if there are several IP-controlled devices

Service

- Only accessible to JUST Customer Service

Device Settings

Light Setup

Light Source	Operation Hours	Actions
D65	2489	Reset operation hours
A	2496	Reset operation hours
TL84/CWF	2492	Reset operation hours
D50	2493	Reset operation hours
UV	2493	Reset operation hours

Operation Mode

Operation Mode	Actions
Single Source	activate
Mixed Sources (active)	activate

Factory Settings

Restore Factory Settings

Network Settings

Here you can change the network settings of your Just CVL.

Caution: Wrong configurations can cause unreachability of your Just CVL.

Parameter

MAC Address

70:83:D5:53:81:0D

Hostname

JUST-CVL

DHCP

☒ DHCP enable

IP Address

192.168.16.156

Subnetmask

255.255.255.0

Gateway Address

192.168.16.1

Primary DNS Server

192.168.16.22

Secondary DNS Server

0.0.0.0

Save

// MAKING FUNCTION SETTINGS DIRECTLY ON THE ELECTRONIC CONTROL PANEL OF THE DEVICE:

Languages

Changing the language setting

1. Press the *MENU* key
2. Use the +/- keys to select *3. Device Setup*, confirm with *OK*
3. Select *Language*, confirm with *OK*
4. Use the +/- keys to select the required language, confirm with *OK*

Operation hours meter

Reading out and resetting the operation hours

When selecting the illuminant, the remaining operation hours appear at the top right in the display (except UV)

1. Press the *MENU* key
2. Use the +/- keys to select *1. Light Setup*, confirm with *OK*
3. Use the +/- keys to select the required illuminant, confirm with *OK*
4. *Resetting the operation hours:*
Use the +/- keys to select *Reset*, confirm with *OK*

Mixed Light / Single Source

Activating several illuminants simultaneously or singly.

1. Press the *MENU* key
2. Use the +/- keys to select *1. Light Setup*, confirm with *OK*
3. Use the +/- keys to select *Operation Mode*, confirm with *OK*
4. Activate *Mixed Light* or *Single Source* with *OK*

All combinations of the five illuminants can be activated in Mixed Light mode.

Save Programs

Viewing sequences can be stored

1. Press the *MENU* key
2. Use the +/- keys to select *2. Sequence Setup*, confirm with *OK*
3. Use the +/- keys to select the required program, confirm with *OK*

4. Set the illuminant, dimming and time for the first sequence; to do so, switch the illuminant on/off via the corresponding key
5. Use the +/- keys to set the dimming, confirm with *OK*
6. Switch between duration *T* und sequence *S* with *OK*;
Use the +/- keys to set the duration $T=xx \text{ sec.}$, confirm with *OK*
7. Use the +/- keys to create the second sequence $S=xx/xx$, repeat Steps 4–6
8. Press the *MENU* key to save and finish the program

Note: Illuminants can be selected simultaneously if *Mixed Light* has been activated under *1. Light Setup*.

Retrieving Programs

Running of stored viewing sequences

1. Press the *AUTO* key (on *ADVANCED* version, viewing sequence starts automatically)
2. Use the +/- keys to select the appropriate program, confirm with *OK*
3. The viewing sequence starts and can be paused with *OK*. Abort by pressing the *MENU* key

Dimming

Dimmable illuminants D65, TL84, ALT

1. Select the required illuminant
2. Use the +/- keys to set the required percentage dimming

Storable dimming (via Presets)

Illuminants D65, TL84, ALT

1. Select the required illuminant
2. Use the +/- keys to set the required percentage dimming
3. Press the *OK* key. *Presets* appears in the display
4. Use the +/- keys to select *Preset save* (1 or 2), confirm with *OK*

Retrieving Presets

1. Select the required illuminant
2. Press the *OK* key
3. Use the +/- keys to select *Preset load*, confirm with *OK*